


Harmony 670 Remote

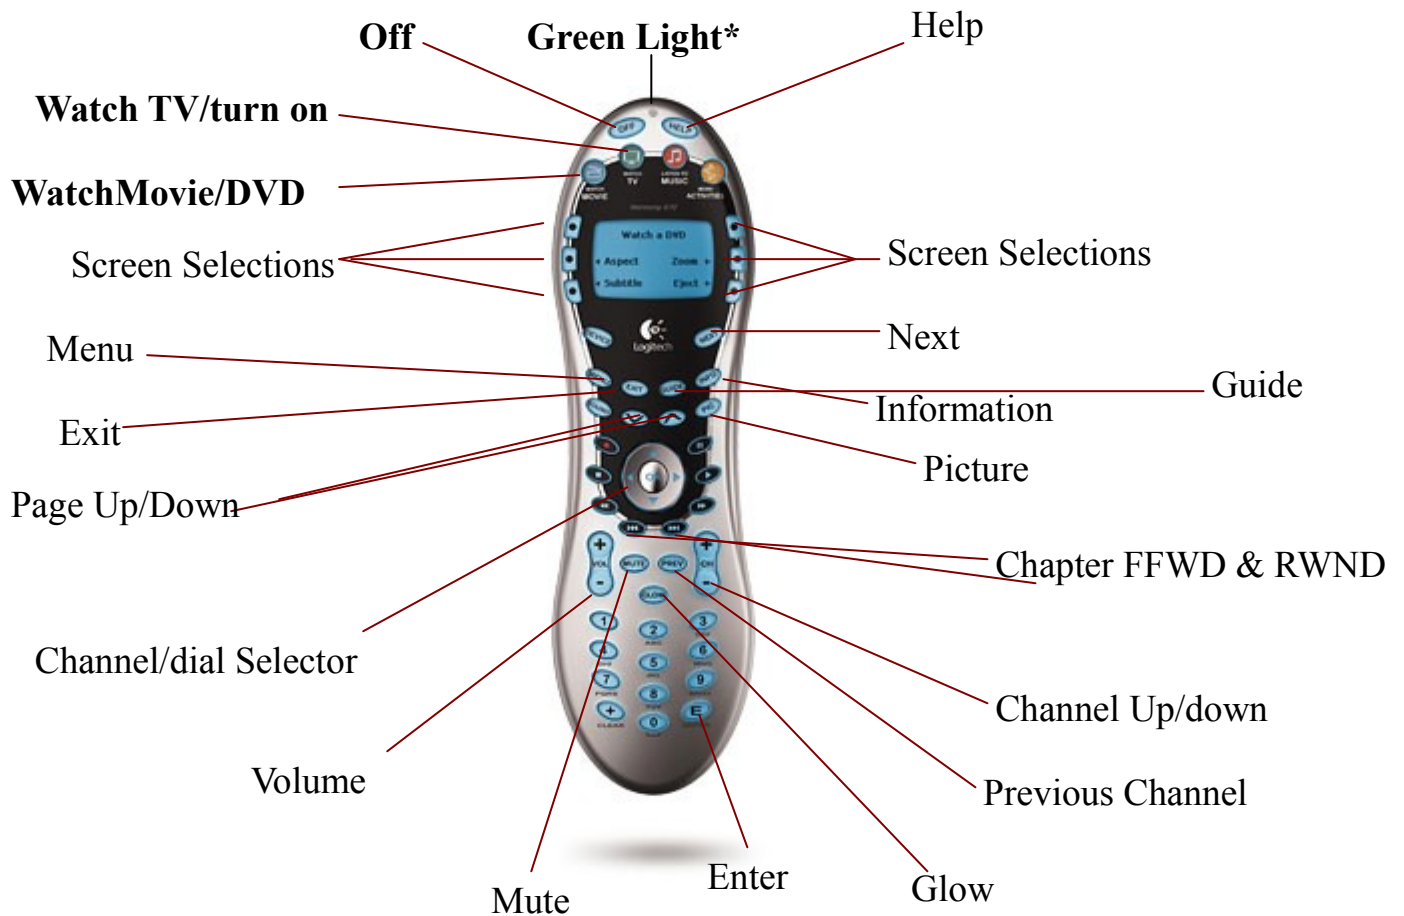

Off– Turns TV, DVD & Cable Box off

Watch TV-Turns on cable/television

Watch Movie-turns on TV & DVD

Screen Selection– choose options on remote screen, eject, menu, etc.

Device-switch from DVD to TV (not recommended)

Menu-This will pull up either cable options (PPV, music) or (picture, audio, treble, control).

Exit-exit out of guide & information page

Sound– generally not used
Page up/down– flip through more channels on the channel guide faster (Master only)

Stop– Stop Movie
Play– play DVD

Channel/dial Selector– scan through channels by time/day/up/down, also can be used for changing inputs.

Volume– controls all Volume

Mute– turns off sound

Glow-Creates a backlight to see buttons in the dark

Enter– press after numbers or on guide to make selection.

Prev– will flip back to the previous channel you were watching

Channel up/down-scroll through channels individually

Chapter FFWD/RWND– skip through scenes on DVDs

Guide-Pulls up all television channels, scroll through with the page up/down or individually with the channel/dial selector (Master Only).

Picture- Picture Menu adjusts color/screen settings

Information– Gives a brief description of the TV show selection.(Master Only).

Next-Displays next TV show, or next option on remote screen.

More Activities– Lists other options programmed on the remote (varies depending on your installations).

Listen to Music– Listen to Ipod/Cable Music/DVD music, not always available (varies on installation)

****Help**** Asks yes/no questions (on remote screen) to walk you through any problems.

*** Green Light-** Make sure you aim the remote at the TV until the green light stops flashing

See Forever

Harmony 670 Remote Control Instructions

Make sure to keep the remote pointed at the TV until the green light stops flashing

Watch TV:

-Always POINT THE REMOTE AT THE TELEVISION. Then press the "Watch TV" button (located at the top of the remote).

Watch DVD:

-To watch a movie press "Watch Movie" (located at top of the remote); make sure you are pointing the remote at the television (and the green light on the remote flashes directly at the TV).

Help!

Help- Press the help button located on the top of the remote. It will ask you yes/no questions to walk you through any problems. Use the screen selection buttons to answer yes/no.

No Picture?

- It is easier to switch from DVD to TV (and vice versa) by using the buttons on the top "Watch Movie & Watch TV" rather than using the device button. Also check your inputs (see above).
- If the TV is on but fuzzy or blank, make sure you are on the correct input. If you are in the Master bedroom this will be input 1, if you are in the guest bedroom this will be cable. You can change the input by pressing the "watch tv" button again, and a box on the right side of the screen should show up. Use the selector dial to go up or down, then press ok. -The
- If it will not switch over to DVD press the watch movie button again, and make sure you are on the correct input. In the Master bedroom it will be on input 3, if in the guest bedroom it should be on channel 4. You can also check which input it should be on by using the Help button.

No Volume?

- If you have troubles adjusting the volume, make sure on your remote control screen that you are on DVD and not TV if you are watching a movie and Vice Versa. To get out of the other screen press "Watch Movie/TV." You should see a volume bar on the TV while changing the volume.