

MT-1000C Instructions



Press **Main** to **Begin**.

Select **"Watch TV," "Listen to Music," "Movies,"** or **"Music Zones"**

"Watch TV"

- You can choose *"News, Family, etc.* to scroll through different channel categories.
- Cable Cont.*-this option allows you to enter channels manually.
- The **easiest way to go through channels is to use the Guide option.** You can scroll up by using the page up and down buttons, and also by day.

List- This option allows you to view shows that you have recorded.

Touch **Back** or **Main** to get to the main menu.

"Listen to Music"

This will take you to the following 3 options: *Cable, IPOD, or DVD.*

Cable Music- This will list music channels on the touch screen.

IPOD- To play the IPOD you **must** physically **walk up to the IPOD** and change the selection. Or you can walk up to the APAD and change the music (see APAD instructions).

DVD- Play DVD/CD's in the DVD player

"Watch Movies"

Watch DVDs

"Music Zones"

This option allows you to pick where you want the music to play: Great Room, Kitchen, Deck* (not always available).

Turn off- Turns all zones off.