


See Forever
APAD Instructions

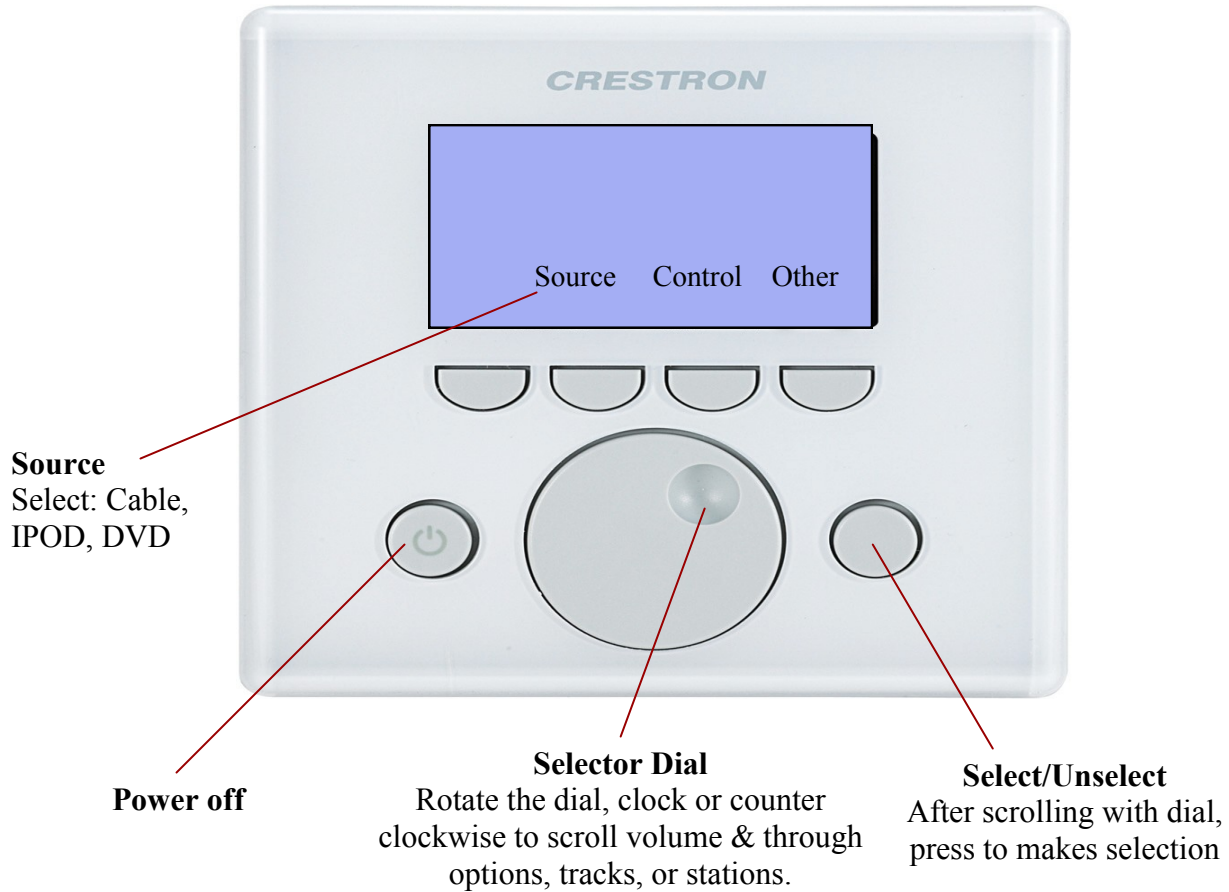

*If you Press **Control** the above options appear*



*If you press the **Other** button the above options appear*

Menu– Main-Go Back

Play-go forward and back on tracks, play, pause, shuffle

Music-Ipod Menu, artists, albums, playlists; roll dial to select and use the select button to play.

Disp– Display, no need to use

Menu– Go back, main

Rooms– controls sound to different areas
 Select kitchen, main, master, etc.

Tools– Controls bass, treble, etc.

Groups-Not necessary, select read, party, dine, changes the sound coming from